Updating the eMS home firmware

These instructions describe how to update the firmware for the eMS home load management system to the current version. The updated software extends the feature set of your load management system.

Prerequisites

The following requirements must be met in order to perform the update:

- The eMS home load management system must have been properly installed and commissioned by a qualified specialist electrical contractor.
- The following components are required to perform the software update:

Component	Description	Quantity
	 Computer (desktop or laptop) with a current operating system (Windows, macOS or Linux) and a web browser a minimum of 100 MB available hard drive space an Ethernet port internet connection 	1
	RJ45 network cable	1
	ZIP file for the update to the current version (included in the ARCHIVE folder where this guide is located, see step 1 below)	1

Updating the firmware

Proceed as follows:

- 1 Open the website www.ablmobility.de/en and download the file linked in the Service > All downloads > Software > Softwareupdate eMS home section to your computer.
 - Unpack the file in a directory of your choice.



2 Connect the RJ45 network cable to one of the LAN interfaces of the eMS home.



3 Connect the other end of the network cable (directly or via a router/switch) to the computer.





4 Open a browser on the computer and log in to the

face" in the eMS home user manual.)

(→ Please read "Starting the eMS home web inter-

eMS home web interface.

- 5 Click on the **Device settings** entry in the sidebar or on the button at the bottom of the web interface.
- 6 Navigate to the **System info** section and note the entry in the **Device type** section.
 - The selection of the update file in step 8 depends on the device type noted here.
- Navigate to the Device > Update device firmware section and click the Browse button.

Deshboard	Home		
Sman meter	Energy balance ()	Phase values	
© Childs store } Device settings	- (68 KWh)	Image: Non-Stress Phase Phase L1 L2 L3 200A 040A 00A Diment 2223 V 2278 V 2284 V Diment 0.00 0.00 0.00	
	Smitt motor Walks	Data store	

_				٨BL
Deshboard		Home / Device settings / App		Messages English Profile
Smart rooter	System info	e ①	18	
Deta store	Product name Device type	eMS borne hw0190		
*6 Device settings	Schwere vention Sorial number CPU load CPU temparature RAM usage Apps	10.3 79024000 100 % 68 °C 29 % 8 %		
	Data Host name IP adaress MAC address	7 % eMS-home-75628010 168,254,132200 (0 00:00 93:58:27:33		

			۸BL
			Messages English Profile
Device ()		×	
time settings, restart device and update			
Date and time			
Your time zone Europe/Borlin	•	SME	
NIP O			
Use the 'Set time' button to set the device time to your local browser time.			
Device system time 2552022, 8:56:16 AM Your browser time 2552022, 8:56:16 AM		SET TIME	
Advanced settings >			
Reset			
Restatt device		RESTART	
Reset device to factory defaults		NESCT	
Update device firmware			
Soloct a file	Broase	UPDATE	
Susteen lans			

ΛBL

8 In the directory with the unpacked ZIP file, select the appropriate update file (hw0100 or hw0200) and click Open.



- 9 In the Device > Update device firmware section, click the Update button.
- Data and finan Tura and an and the section of the final and the section of the section of

Device ()

- **10** The firmware update will be executed, which may take a few minutes.
 - During the update process, eMS home is restarted.



					Λ	BL
				(1) Messages	😍 English	A Profile
Dashboard						
Phase	e value	s				
• • • •						
Pha	ase L1	Phase L2	Phase L3			

You can then set up the new functions of the eMS home via the web interface. Please read the detailed eMS home user manual.

11 After completion, a message about the successful update is displayed in the system messages.